

ONLY CLEAN PANTS ARE SAFE PANTS

Washing instructions for chainsaw protection pants:

During use of the chainsaw protection pants sweat and oil regularly penetrates the layer of the chainsaw protection. This dirt agglutinates the fibres that ensure the chainsaw protection, and thus reduces the protective effect. In order to maintain the performance of the chainsaw protection, it is necessary to wash the pants properly on a regular basis. For daily use and average pollution, weekly cleaning cycles are recommended. If heavily soiled, wash immediately after wearing.

Preparation

In case of extreme contamination apply the detergency boosters, optimally mixed 1:1 with water, directly on the stain using a spray bottle and, if possible, allow to react overnight in water. Then remove the stain with a hand brush and wash the clothes as usual.

Machine wash

To ensure that the oil is removed from the washing machine, it is important to use liquid **colour detergent** and **not a heavy-duty detergent**.

Dose the colour detergent as usual. For 1 kg of dry laundry (chainsaw protection pants of 1.6 kg) add 10 ml detergency boosters in the detergent compartment for prewash.

ATTENTION

Start prewash at 40° C and switch off the spin cycle!

The chainsaw protection pants must not be put through spin cycles.

The spin cycle of a washing machine acts on the chainsaw protection of the pants like a milling action and compresses the fibres. This would significantly impair the chainsaw protection.

Remaining forest clothes (work wear): Prewash at 40 °C.

After washing, pull the pants into form and hang to dry.

Under no circumstances put the chainsaw protection pants in the dryer. Like the spin cycle this has a negative effect on the chainsaw protection.

Storage and Transport

Chainsaw protection pants should be kept in a well-ventilated and dry room. Extreme temperatures and contact with fluids or UV radiation (e.g. showcases) should be avoided.